

 
Adobe Photoshop's color space needs to be set to the working space in which the Sublimation ICC Profile was created. This then allows for a more accurate screen display of your images. The accuracy of the displayed image on your monitor will be highly dependent on the quality of your monitor and, more importantly, a calibrated monitor ICC profile.

Start **Photoshop CS4** and bring up the color settings window by clicking **Edit > Color Settings**.

- 1 Set the **Working Spaces—RGB**: to **Adobe RGB (1998)**.
- 2 Set the **Color Management Policies – RGB** to **Convert to Working Space**.

Leave the other settings as shown at right. Click **Save**, then name the settings appropriately.

Photoshop's RGB working space is now set.

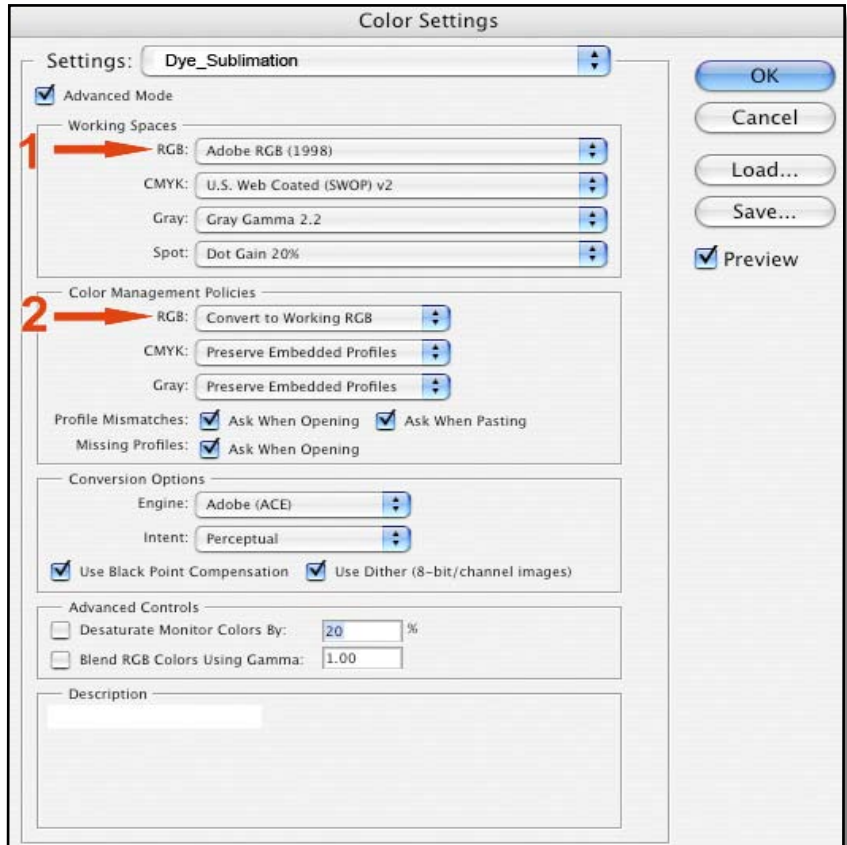


When opening images in **Photoshop CS4**, you may encounter an **Embedded Profile Mismatch** warning.

- 1 When this **Embedded Profile Mismatch** dialog appears, select **Convert document's colors to the working space**. Then click **OK**.

You can now work on your images as you normally do.

 When your image is ready to print, click **File > Print with Preview**.

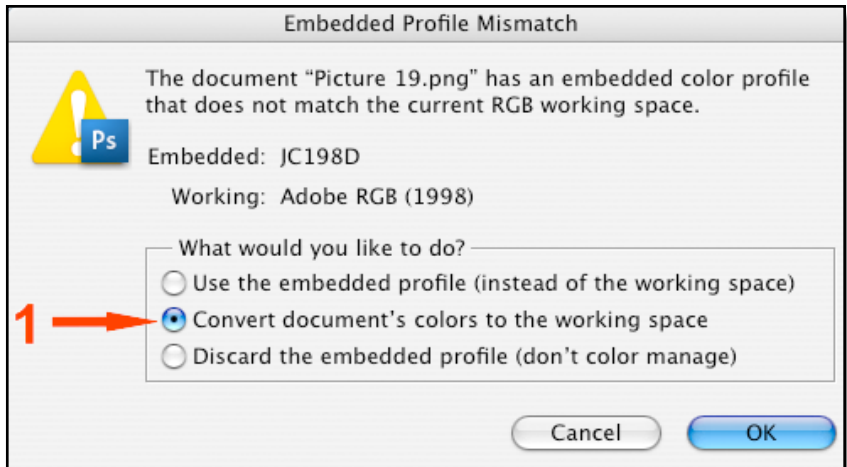

EPSON 1400 - ICC PROFILES - MAC OS - CS4 PHOTOSHOP

- 1 Select the **Printer** from the drop-down menu.
- 2 Select the **Color Management** option from the drop-down menu.
- 3 Under **Print** choices, check **Document**.
- 4 Under **Color Handling**, select **Photoshop Manages Colors** from the menu.
- 5 Under **Printer Profile**, select the appropriate ICC Profile from the menu.
- 6 Under **Rendering Intent**, select **Perceptual**.
- 7 Click **Print**.

Note: If you do not see any reference to **Sublimation ICC Profile** in the print space list, this means that either the ICC profile is not installed in your system, or **Photoshop** has not been restarted since the profile was installed. This installation requires that **Photoshop** be restarted.

Once you have clicked **Print**, the **Print** window will open.

- 1 Select the Printer from the drop-down menu.
- 2 Select 'Printer Settings' from the drop-down menu.
- 3 Select **Epson Matte** from the **Media Type** drop-down menu.
- 4 Under **Mode**, check **Advanced**.
- 5 Select **Photo** from **Print Quality** drop-down menu.
- 6 Check **High Speed**.
- 7 Check **Mirror Image**.

- 1 Select **Color Management** from the drop-down menu.
- 2 Check **Off (No Color Adjustment)**
- 3 Click **Print**.

Click **Print** in the **Print** dialog, and the image will be sent to the printer with the configured settings.

