


Adobe Photoshop’s color space needs to be set to the working space in which the Sublimation ICC Profile was created. This then allows for a more accurate screen display of your images. The accuracy of the displayed image on your monitor will be highly dependent on the quality of your monitor and, more importantly, a calibrated monitor ICC profile.

Start Photoshop CS and bring up the color settings window by clicking *Edit > Color Settings*.

- 1 Set the *Working Spaces—RGB*: to *Adobe RGB (1998)*.
- 2 Set the *Color Management Policies – RGB* to *Convert to Working Space*.


Leave the other settings as shown at right. Click **Save**, then name the settings appropriately.

Photoshop’s RGB working space is now set.

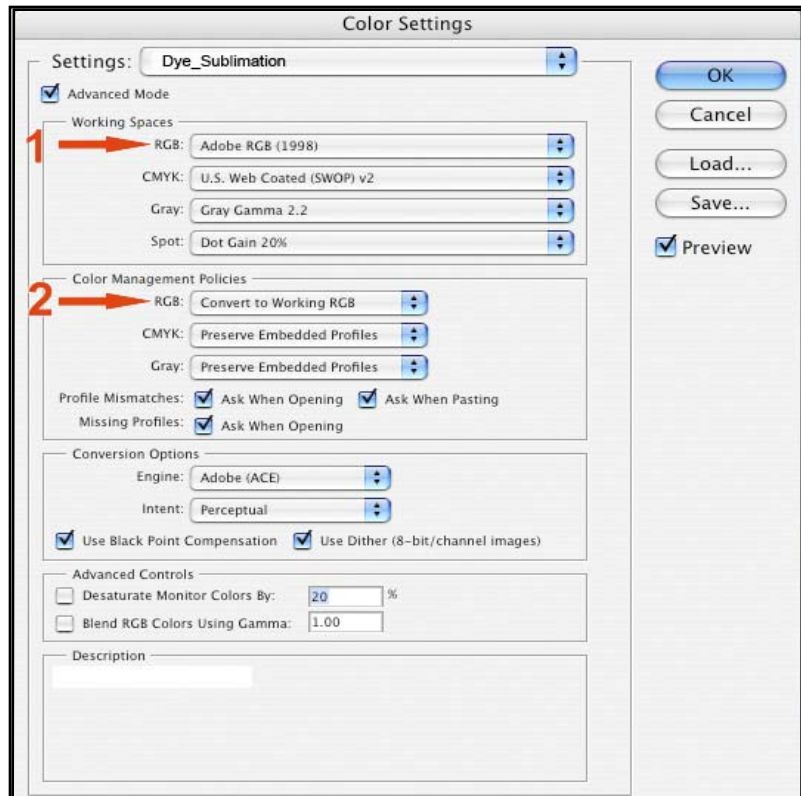

When opening images in Photoshop CS, you may encounter an **Embedded Profile Mismatch** warning.

- 1 When this **Embedded Profile Mismatch** dialog appears, select *Convert document’s colors to the working space*. Then click **OK**.

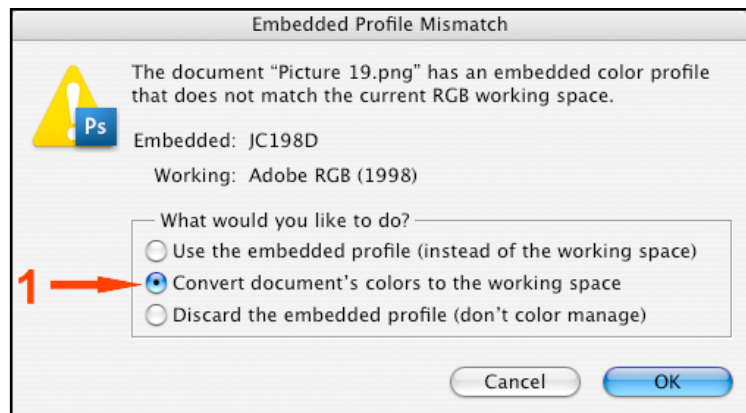

You can now work on your images as you normally do.

When your image is ready to print, click *File > Print with Preview*.

ink. differently® is a Registered Trademark, and Sawgrass Technologies is a Trademark of Sawgrass Technologies, Inc. Epson is a Registered Trademark of Epson Seiko Corporation.

EPSON R1900 - ICC PROFILES - MAC OS - CS PHOTOSHOP

- 1 Select the **Color Management** option from the drop-down menu.
- 2 Under **Source Space**, check **Document**.
- 3 In **Print Space** > **Profile**, select the appropriate profile from the drop-down menu.
- 4 Under **Print Space** > **Intent**, select **Perceptual**.
- 5 Click **Print**.

Note: If you do not see any reference to **Sublimation ICC Profile** in the print space list, this means that either the ICC profile is not installed in your system, or **Photoshop** has not been restarted since the profile was installed. This installation requires that **Photoshop** be restarted.

Once you have clicked **Print**, the **Print** window will open.

- 1 Select the Printer from the drop-down menu.
- 2 Select 'Printer Settings' from the drop-down menu.
- 3 Select **Epson Matte** from the **Media Type** drop-down menu.
- 4 Select **Off** (No Color Adjustment) from the 'Color Settings' drop-down menu.
- 5 Select **Photo** from **Print Quality** drop-down menu.
- 6 Check **High Speed** and **Mirror Image**.
- 7 Click **Print**.

Click **Print** in the **Print** dialog, and the image will be sent to the printer with the configured settings.

